



Appendix E: Standard Operating Procedures TSI QTrak Monitor

1. Determine the 3 sampling locations in home
2. Remove monitor from case and turn power on, the monitor will automatically go to survey mode.

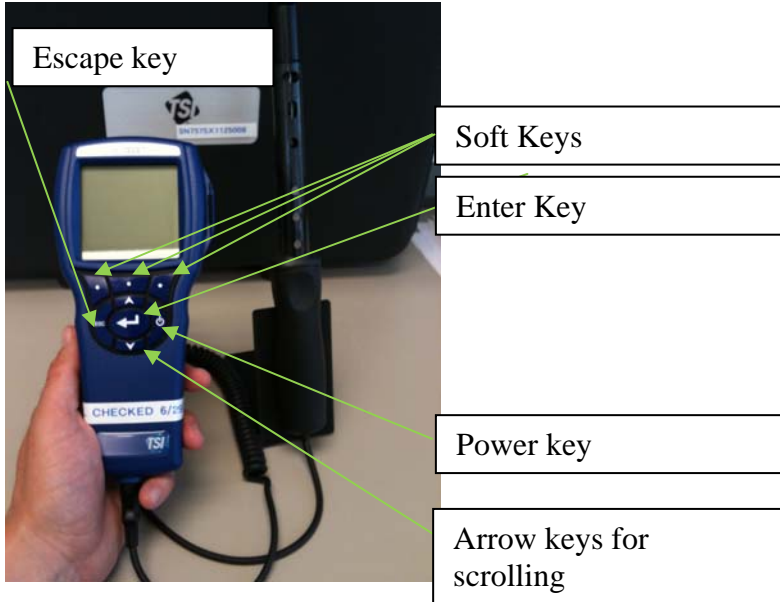

3. Allow the monitor to warm up for 2 minutes. Check the battery status. Set up the probe on the probe stand

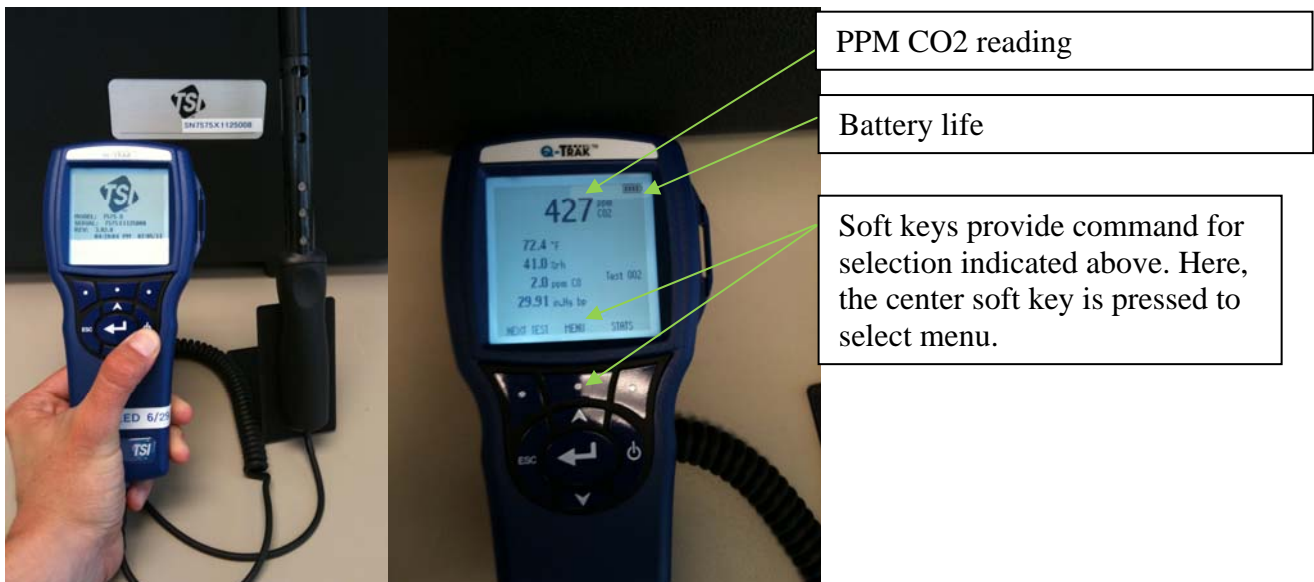


4. Press the soft key to select MENU then scroll down to Data Logging and press the Enter Key



5. Scroll down to log mode, press the enter key, scroll to Cont.-time and press the enter key again. The screen will briefly display “Changes Saved” if you were successful, and you will return to the DATA LOGGING screen.




6. Scroll to Log Settings and check that Log Interval is set to 00:05 and Test Length to 00:00:20. If not press the select each and press the enter key to adjust. Use the soft keys to select the number you are adjusting, and the up or down arrows to increase or decrease the value. Press enter to save changes.

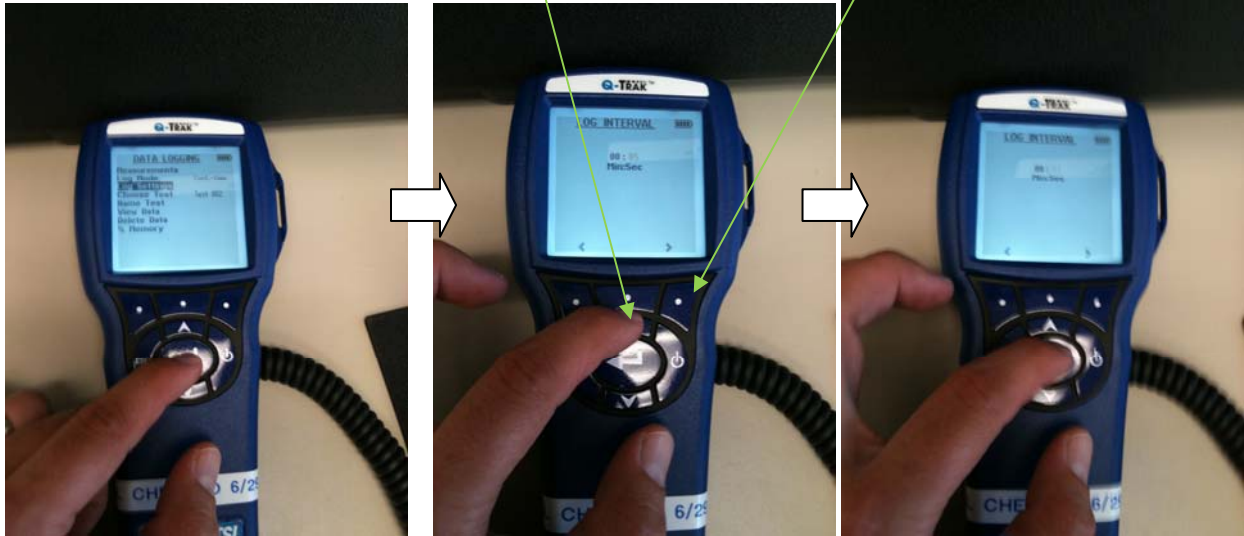


7. Press the Escape key three times to exit back to the sample screen, and press the soft key under NEXT TEST to ensure a new test is selected. Note the Test number on the right side of the screen. Press the Enter to begin the test.



- The test will begin and the test information will come up on the screen.
After the test is complete, Select the Stats button to record the test stats

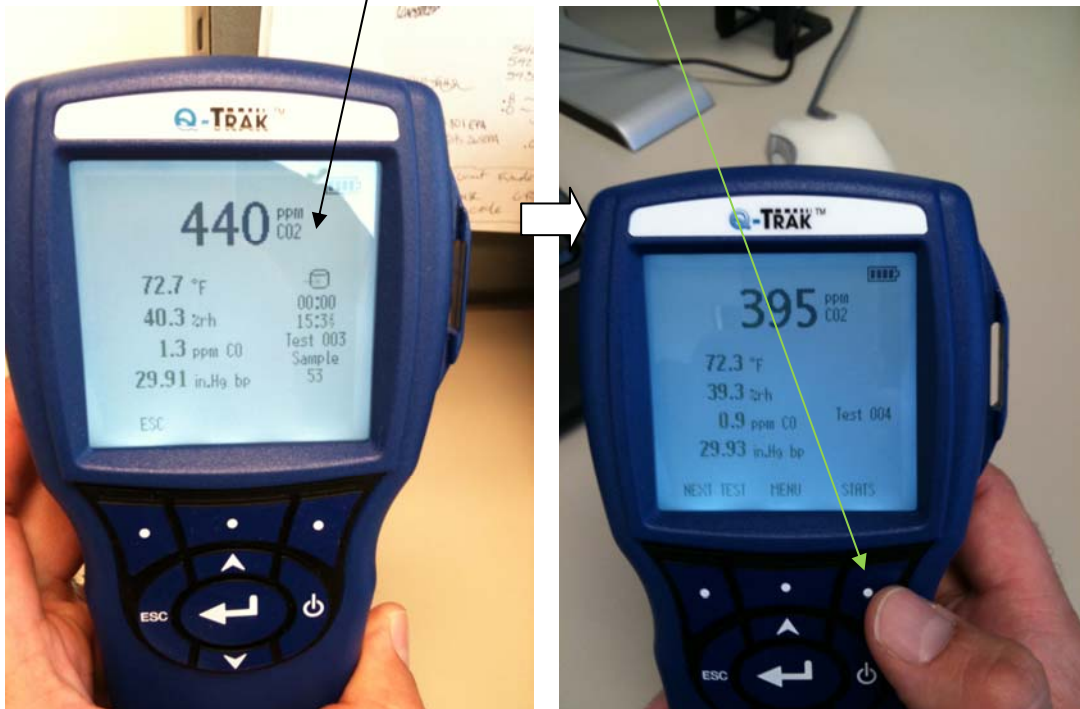

- Scroll between stats parameters using the soft keys and record the MAX, MIN and AVG values.

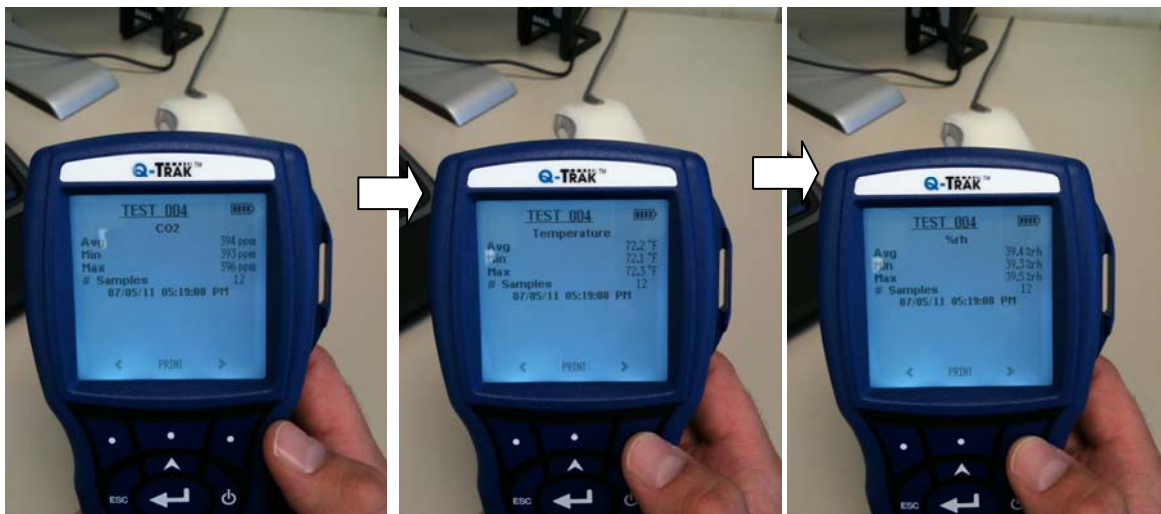

- Once all the data has been collected on the field data sheet, press the Escape key to return to the main menu.